




NATURAL BEAUTY WITH
OUTSTANDING PERFORMANCE



# Start exploring

WHAT MAKES QUICK-STEP TIMBER
SO UNIQUE?
P. 4
STEP BY STEP TOWARDS CIRCULARITY
P. 12
LET'S HELP YOU DECIDE
P. 14
FAQ
P. 42

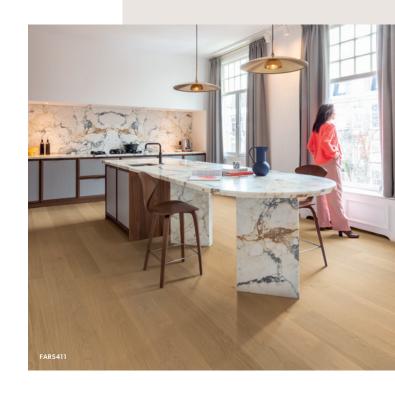



# Discover your new timber floor

COLLECTION OVERVIEW	P. 18
FARO	P. 20
CASCADA	P. 22
AMATO	P. 24
READYFLOR 1-STRIP	P. 26
READYFLOR 2-STRIP	P. 28
READYFLOR 3-STRIP	P. 29
MASSIMO	P. 30
INTENSO	P. 32
READYFLOR HERRINGBONE	P. 34
TOOLS TO HELP YOU CHOOSE	P. 36
ACCESSORIES	P. 38





# **EASY TO CLEAN**

Thanks to our Surface & Edge Protect, your floor will stay looking beautiful.

It ensures that the surface and joints are protected against dirt and spills,
allowing it to easily maintain its natural look.



# WATERPROOF SURFACE

Don't worry about water! Our Faro, Cascada & Amato collections have a waterproof surface and are perfectly suited to every room of your home, including the kitchen!



# **EASY INSTALLATION**

Whether you do it yourself or get help from a professional, and whether your choice is floating or glued-down installation, it's as easy as 1-2-3!

Our Uniclic system makes it easy to fully close the joints.



# Wood for Life




EASY TO MAINTAIN
EXTREMELY DURABLE
SCRATCH & STAIN RESISTANT

# WHAT DOES WOOD FOR LIFE MEAN?


Life can be messy – from dirty shoes and muddy paws in the hallway, to red wine stains and spaghetti bolognese on the kitchen floor. Our Surface & Edge Protect + treatment protects your floor so that dirt, spills, and dust don't get into the grain and joints.


In this way, Quick-Step timber is easy to maintain and extremely durable. Seven layers of protective lacquer ensure your floor is highly durable and scratch resistant.

Wood for life means, you can enjoy a floor that stays beautiful for years to come.

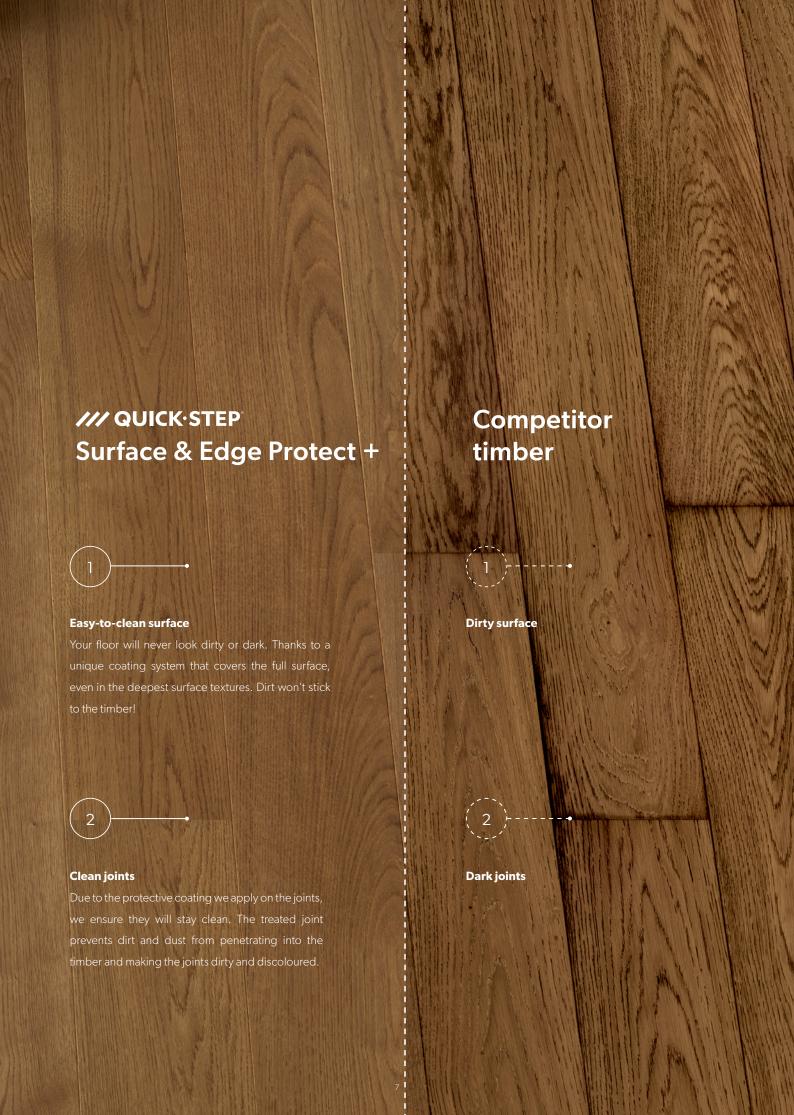




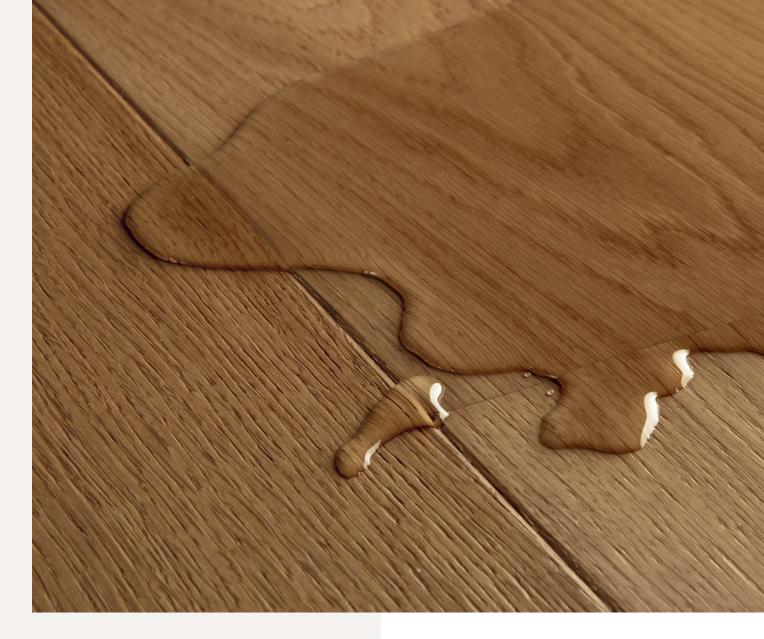

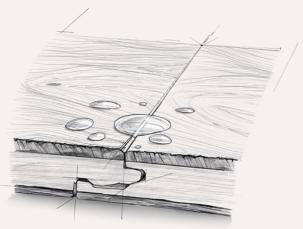


# /// QUICK·STEP

Enjoy our new and improved click system, which makes it impossible for water to seep through the joints. On top of that, the Hydroseal water repellent coating on all four sides of the plank means that water can stay on your timber floor for up to 72 hours without causing damage.

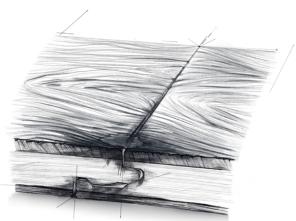

# COMPETITOR

Without our click system, you might not get a tight fit on all sides. Water can seep through the joints, creating mould or causing damage to your subfloor.

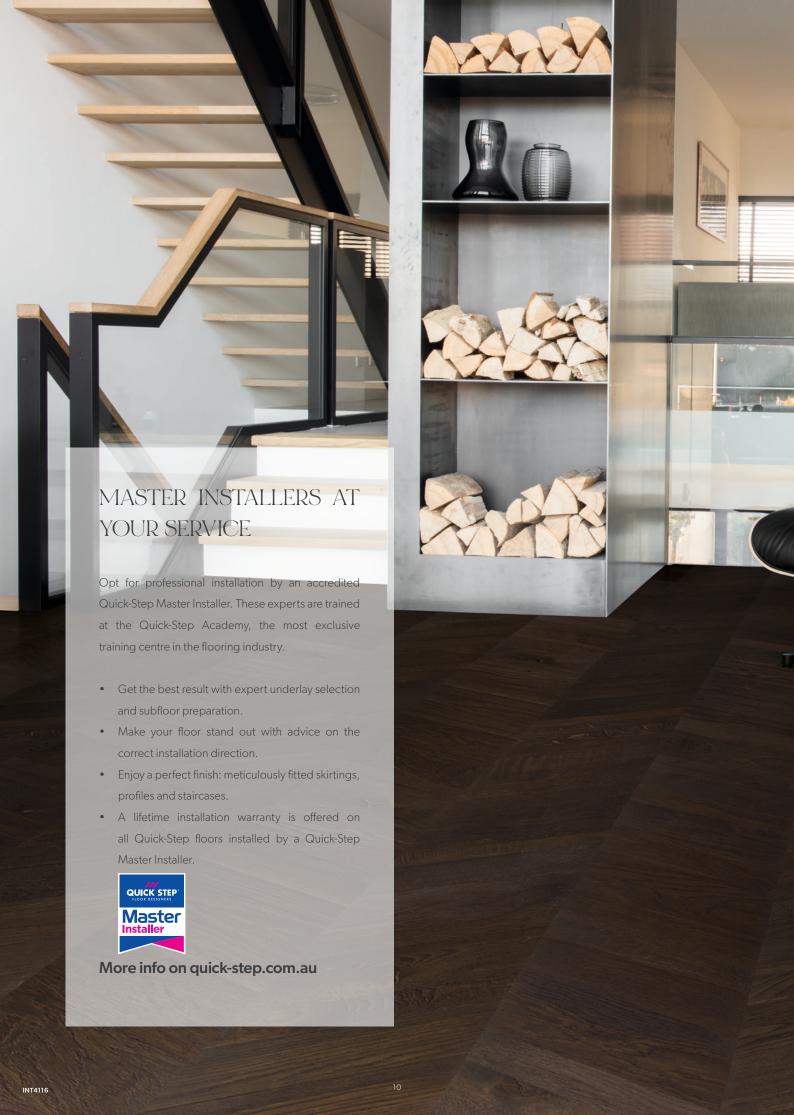





Being as sustainable as possible is important to us. We want to create a circular system where our floors can be recycled and re-used as raw materials at the end of their lives instead of being thrown away. How are we going to do this? We have set ourselves clear and ambitious science-based targets for 2030, and we're always innovating in order to meet them.

Step by step, here's how we're improving the sustainability of our timber floors.



WANT TO KNOW MORE? SCAN THE QR CODE OR VISIT QUICK-STEP.COM.AU STEP

# Made from sustainably sourced wood



The core and backing of our planks are made of recovered wood or fast-growing trees which can be replaced quickly, so we don't contribute to deforestation. As for the beautiful top layer of our timber planks, it is made from noble wood species, like oak. Because it grows slowly, it takes a long time to replace them. We source these trees from sustainably managed forests, and we harvest as few as possible. That's why we optimise the top layer thickness of our planks, so we can preserve more of this precious natural resource.



STEP 2

# Designed to last a lifetime

Our timber floors are guaranteed for life. Because making floors that last as long as possible is the most sustainable way forward. We ensure that our floors don't have to be thrown away after a few years: watertight, scratch, and stain resistant, and easy to maintain thanks to our water-based lacquered finish. They'll look as good as new for years and years to come. Which is good for the planet, and good for your home, too.

STEP 3

# A new life for your timber floor



We're proud to say that we were the first company in the world to develop a ground-breaking recycling technology: we can now turn the core of our timber flooring into new materials. Our goal is to replace 25% of the virgin wood fibres for our HDF core with recycled fibres by 2030. We're also working hard to develop take-back schemes for old floor planks. A floating installation makes recycling much easier. When the time comes, you can easily remove the floor, without causing any damage or mess.













LET'S HELP YOU DECIDE

# Grading differences

Our classification system divides our wide range of oak floors into different categories: nature, marquant and vibrant. Even though each plank is unique, this will give you an idea of what your floor will look like in the end.

All Australian wood varieties are graded as per AS2796 Standard and Better. This grade includes knots, gum veins, fine cracks and other natural features of Australian Eucalypts.

Naturally, all wood floors change colour overtime. This is a natural part of the ageing process. Also be aware that your flooring will vary from in-store samples.




# **NATURE**

Natural colour variation and small knots for a subtle look.

KNOTS & CRACKS



VISUALISE YOUR CHOICE OF FLOORING IN YOUR INTERIOR WITH OUR ROOMVIEWER.

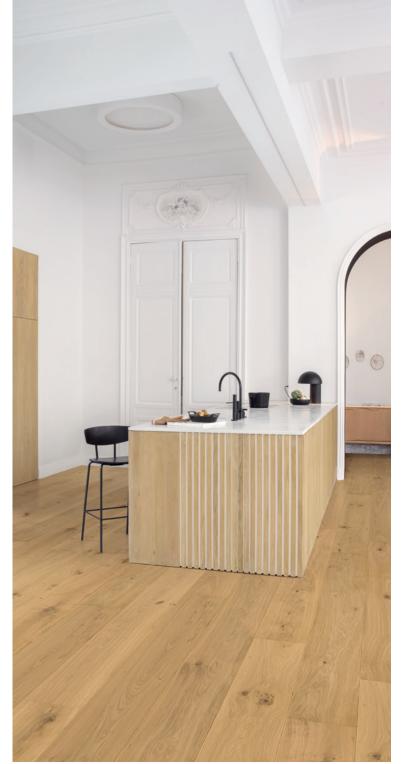



# MARQUANT

Lively colour variation with more pronounced knots for a rustic look.

KNOTS & CRACKS

# **VIBRANT**

Lively colour variation with larger knots and features for a floor full of character.

KNOTS & CRACKS

# Types of wood & Janka rating

The beauty of nature lies in its variety and detail, and that is exactly what the Quick-Step Timber offers. \*Janka rating is a measure of the resistance of the wood to indentation. The higher the number, the more indentation resistant the timber.

\*11

# SPOTTED GUM

Spotted Gum is an Australian hardwood with wide colour variation and excellent hardness. It may contain some fine surface cracks. This wood species is not recommended with heated subfloors.



# **MERBAU**

Merbau is a reddish brown hardwood of excellent durability from South East Asia. It often contains a small yellowish fleck in the grain.



# OAK

Our Oaks are categorised into three grades based on the level of character displayed; Nature, Marquant and Vibrant.













\*9.

# **BLACKBUTT**

Blackbutt is an Australian hardwood with excellent hardness. It may contain prominent gum veins, insect marks as well as some fine surface cracks. This wood species is not recommended with heated subfloors

\*7.5

# SYDNEY BLUE GUM

Sydney Blue Gum is an Australian hardwood with wide colour variation and moderate hardness. This wood species often contains a variety of dark borer marks and trails.

\*5.6

## TASMANIAN OAK

Tasmanian Oak is a blend of pink/ straw coloured hardwood species of moderate hardness from Tasmania. Some small surface splits or surface checks are an occasional characteristic of Tasmanian Oak.

# Surface treatment

You'll want to enjoy your floor from the moment it's installed. That's why we pre-treat it with lacquer.

If you want to enjoy our Surface & Edge Protect + guarantee or a watertight wood floor, our lacquered finish gives the best protection against wear and tear, as well as dirt and spills.




# (DEEP) BRUSHED

Through brushing, the natural grain structure of the wooden plank is accentuated, adding depth.

# Finish



All Quick-Step timber floors are pre-finished with a specifically formulated, high performance European lacquer. You won't need to lacquer or oil the floor after installation. Thanks to this protective layer, your timber floors will look brand new, even after years of use.

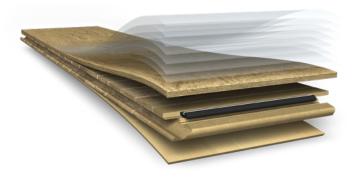

- ✓ High quality lacquer finish
- ✓ Solid hardwood face layer
- ✓ Plantation hardwood Hevea or HDF core
- ✓ Plantation Nordic spruce backing



# LACQUER FINISH IN (EXTRA) MATT, LOW SHEEN AND GLOSS

- Seven layers of protective lacquer.
- Highly scratch and wear resistant.
- Improved protective layer that keeps the surface and the joints of your floor clean, even after years of use.

# Beauty comes in many sizes

WATERTIGHT COLLECTIONS

FARO

CASCADA

CASCADA

MINICIC
MATERITO ITERMOLOGY

TRADITIONAL COLLECTIONS

READYFLOR 1-STRIP

READYFLOR 2-STRIP

INSTALLATION

IN







READYFLOR HERRINGBONE Tongue & groove



2-SIDED BEVEL

Featuring grooves on the two long sides of the plank to accentuate the width and create a continuous, lengthy appearance.



4-SIDED BEVEL

Featuring grooves on all four sides of the plank to define the plank size and create a rustic appearance.



O BEVEL

A continuous flooring structure for a seamless appearance.







DIMENSIONS	BEVELS	вох	WARRANTY	DISCOVER THE COLLECTION
1820** x 220 x (±) 13mm		6 lengths = 2.402m <sup>2</sup> contains nested lengths •	<ul> <li>✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE</li> <li>✓ 25 YEAR WEAR WARRANTY DOMESTIC USE</li> <li>✓ 15 YEAR WET WARRANTY*</li> </ul>	p. 20
2200** x 190 x (±) 13mm 2200 x 186 x (±) 13mm <b>Spotted gum &amp;</b> <b>Blackbutt</b>	_2_	6 lengths = 2.508 m <sup>2</sup> 6 lengths = 2.455 m <sup>2</sup> contains nested lengths •	✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE ✓ 25 YEAR WEAR WARRANTY DOMESTIC USE ✓ 15 YEAR WET WARRANTY*	p. 22
2200** x 145 x (±) 13mm 1820 x 134 x (±)13 mm <b>Spotted gum &amp;</b> <b>Blackbutt</b>	_2_	6 lengths = 1.914 m <sup>2</sup> 6 lengths = 1.463 m <sup>2</sup> contains nested lengths •	✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE ✓ 25 YEAR WEAR WARRANTY DOMESTIC USE ✓ 15 YEAR WET WARRANTY*	p. 24
2430 x 134 (±) 14mm 1820 x 145 (±) 14mm <b>Merbau</b> 2200 x 145 (±) 14mm <b>Tasmanian oak</b>	O BEVEL	5 lengths = 1.628 m <sup>2</sup> 6 lengths = 1.583 m <sup>2</sup> 6 lengths = 1.914 m <sup>2</sup> contains nested lengths •	✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE ✓ 25 YEAR WEAR WARRANTY DOMESTIC USE	p. 26
2200 x 186 x (±) 14mm	O BEVEL	6 lengths = 2.455m <sup>2</sup>	✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE ✓ 25 YEAR WEAR WARRANTY DOMESTIC USE	p. 28
2200 x 190 x (±) 14mm	O BEVEL	6 lengths = 2.508m <sup>2</sup>	✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE ✓ 25 YEAR WEAR WARRANTY DOMESTIC USE	p. 29
2200** x 260 x (±) 14mm	4	4 lengths = 2.288 m <sup>2</sup> contains nested lengths •	✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE ✓ 25 YEAR WEAR WARRANTY DOMESTIC USE	p. 30
600 x 310 x (±) 13mm	O BEVEL	4 lengths = 0.744m <sup>2</sup>	✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE ✓ 25 YEAR WEAR WARRANTY DOMESTIC USE	p. 32
610 x 122 x (±) 13mm	O BEVEL	12 lengths = 0.893m <sup>2</sup>	✓ LIFETIME STRUCTURAL WARRANTY DOMESTIC USE ✓ 25 YEAR WEAR WARRANTY DOMESTIC USE	p. 34

<sup>\*</sup> Tested according to ISO 4760 (no leakage).

# • What are nested lengths?



Due to the broad variation in sizes in a natural material such as timber we use a limited number of shorter pieces in each pack to make up some of the full plank lengths. These are called "nested lengths". This improves sustainability by allowing us to use all of the tree when we are crafting your floor. These shorter pieces should be used at the start or ends of rows and around the edges of your floor, leaving the full length planks for the main body of your floor.

 $<sup>{\</sup>tt ** Depending \, on \, availability \, product \, length \, may \, change. \, Pack \, sizes \, will \, change \, accordingly.}$ 

 $1820* \times 220x$  (±) 13mm (6 lengths per pack =  $2.402m^2$ )











Frozen oak extra matt FAR6631 MATCHING SCOTIA MATCHING INCIZO

Lily white oak extra matt FAR6917 QSWSCOT06631 MATCHING SCOTIA QSWSCOT01340 QSWINCP06631 MATCHING INCIZO QSWINCP01340

Pure oak extra matt FAR5411 MATCHING SCOTIA QSWSCOT01341 MATCHING INCIZO QSWINCP01341



Walnut oak extra matt FAR6918 MATCHING SCOTIA QSWSCOT01341

QSWINCP01341

MATCHING INCIZO



Vintage oak extra matt FAR6914 MATCHING SCOTIA QSWSCOT01344 MATCHING INCIZO QSWINCP01344



Natural oak extra matt FAR6415 MATCHING SCOTIA QSWSCOT05605 MATCHING INCIZO QSWINCP05605



Fossil oak extra matt FAR6912

MATCHING SCOTIA QSWSCOT01342 MATCHING INCIZO QSWINCP01342

<sup>\*</sup> Timber naturally comes in many sizes, depending on availability product length may change. If the standard length is temporarily not available, your retailer will offer you the alternative length instead. Pack sizes will change accordingly.




Bronze oak extra matt FAR6919 MATCHING SCOTIA QSV

MATCHING SCOTIA QSWSCOT06919 MATCHING INCIZO QSWINCP06919



Clay brown oak extra natt FAR6915

MATCHING SCOTIA QSWSCOT04117
MATCHING INCIZO QSWINCP04117

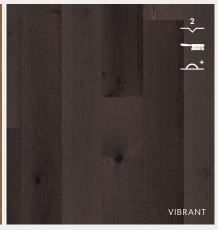


Mocca oak extra matt FAR6916

FAR6916

MATCHING SCOTIA QSWSCOT01348

MATCHING INCIZO QSWINCP01348

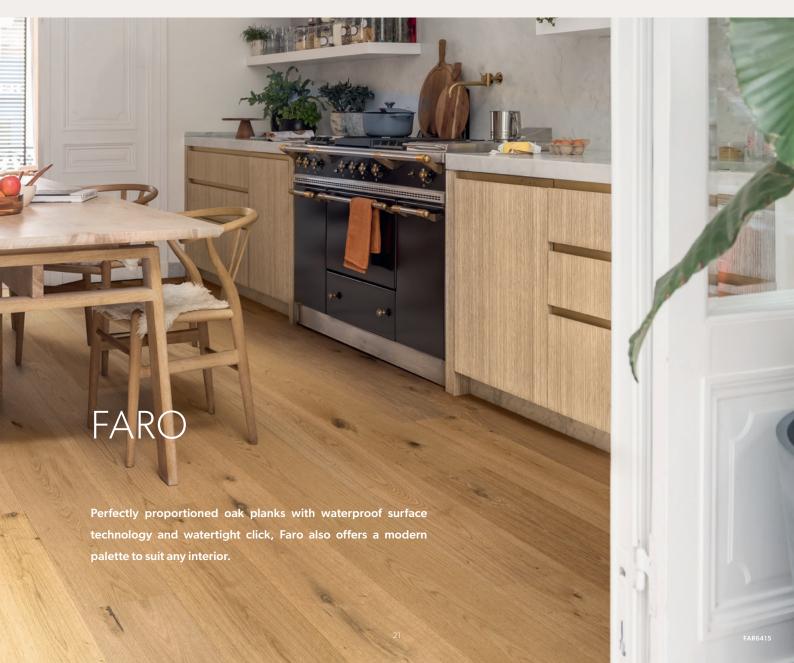



 $2200* \times 190 \times (\pm)13$ mm (6 lengths per pack = 2.508m²)  $2200* \times 186 \times (\pm)13$ mm (6 lengths per pack = 2.455m²) Spotted Gum & Blackbutt









Creamy white oak
CASC5606
MATCHING SCOTIA QSWSCOT03098
MATCHING INCIZO QSWINCP03098



Cappuccino blonde oak
CASC3849
MATCHING SCOTIA QSWSCOT01341
MATCHING INCIZO QSWINCP01341



Vintage oak
CASC6914
MATCHING SCOTIA QSWSCOT01344
MATCHING INCIZO QSWINCP01344



Blackbutt
CASC3858
MATCHING SCOTIA QSWSCOT01865
MATCHING INCIZO QSWINCP01865



MATCHING SCOTIA QSWSCOT01866 MATCHING INCIZO QSWINCP01866

CASC3859



Rock wall oak
CASC5608
MATCHING SCOTIA QSWSCOT05608
MATCHING INCIZO QSWINCP05608



Roasted oak
CASC5609
MATCHING SCOTIA QSWSCOT05609
MATCHING INCIZO QSWINCP05609

<sup>\*</sup> Timber naturally comes in many sizes, depending on availability product length may change. If the standard length is temporarily not available, your retailer will offer you the alternative length instead. Pack sizes will change accordingly.



2200\* x 145 x (±) 13mm (6 lengths per pack = 1.914m²) 1820 x 134 x (±) 13mm (6 lengths per pack = 1.463m²) Spotted Gum & Blackbutt









Wintry forest oak extra matt
AMT3845

AMT3845

MATCHING SCOTIA QSWSCOT01340

MATCHING INCIZO QSWINCP01340



Creamy white oak extra matt
AMT3851
MATCHING SCOTIA QSWSCOT03098
MATCHING INCIZO QSWINCP03098



Pure oak extra matt
AMT3849
MATCHING SCOTIA QSWSCOT01341
MATCHING INCIZO QSWINCP01341



Natural oak extra matt

AMT3844

MATCHING SCOTIA QSWSCOT01334

MATCHING INCIZO QSWINCP01334



Cliff grey oak extra matt
AMT3850
MATCHING SCOTIA QSWSCOT03017
MATCHING INCIZO QSWINCP03017



Slate grey oak extra matt
AMT3846
MATCHING SCOTIA QSWSCOT03846
MATCHING INCIZO QSWINCP03846



Blackbutt
AMT3858
MATCHING SCOTIA QSWSCOT01865
MATCHING INCIZO QSWINCP01865



Spotted gum
AMT3859
MATCHING SCOTIA QSWSCOT01866
MATCHING INCIZO QSWINCP01866

<sup>\*</sup> Timber naturally comes in many sizes, depending on availability product length may change. If the standard length is temporarily not available, your retailer will offer you the alternative length instead. Pack sizes will change accordingly.



 $2430 \times 134 \times (\pm) \ 14mm \ (5 \ lengths \ per \ pack = 1.628m^2)$   $2200 \times 145 \times (\pm) \ 14mm \ (6 \ lengths \ per \ pack = 1.914m^2) \ Tasmanian \ Oak$   $1820 \times 145 \times (\pm) \ 14mm \ (6 \ lengths \ per \ pack = 1.583m^2) \ Merbau$ 









**Tasmanian oak 1-strip matt brushed** RFS6276 MATCHING SCOTIA QSWSCOT01874

QSWINCP01874

MATCHING INCIZO



Blackbutt 1-strip
RFS4600
MATCHING SCOTIA QSWSCOT01871
MATCHING INCIZO QSWINCP01871



MATCHING INCIZO QSWINCP01865



MATCHING INCIZO QSWINCP01872
MATCHING INCIZO QSWINCP01872



Spotted gum 1-strip matt brushed
RFS4606
MATCHING SCOTIA QSWSCOT01866
MATCHING INCIZO QSWINCP01866



Sydney blue gum 1-strip
RFS4604
MATCHING SCOTIA QSWSCOT01875
MATCHING INCIZO QSWINCP01875



Merbau 1-strip RFS4599 MATCHING SCOTIA QSWSCOT01357 MATCHING INCIZO QSWINCP01357

 $2200 \times 186 \times (\pm) 14$ mm (6 lengths per pack = 2.455m<sup>2</sup>)









Tasmanian oak 2-strip matt brushed RFD6276 MATCHING SCOTIA QSWSCOT01874

QSWINCP01874

MATCHING INCIZO



Blackbutt 2-strip RFD4600 MATCHING SCOTIA QSWSCOT01871 MATCHING INCIZO QSWINCP01871



Blackbutt 2-strip matt brushed RFD4605 MATCHING SCOTIA QSWSCOT01865 MATCHING INCIZO QSWINCP01865



Spotted gum 2-strip RFD4601 MATCHING SCOTIA QSWSCOT01872 MATCHING INCIZO QSWINCP01872



Spotted gum 2-strip matt brushed RFD4606 MATCHING SCOTIA QSWSCOT01866 MATCHING INCIZO QSWINCP01866



Merbau 2-strip RFD4599 MATCHING SCOTIA QSWSCOT01357 MATCHING INCIZO QSWINCP01357

 $2200 \times 190 \times (\pm) 14$ mm (6 lengths per pack =  $2.508 \text{ m}^2$ )









Blackbutt 3-strip matt brushed RFT4605 MATCHING SCOTIA QSWSCOT01865 MATCHING INCIZO QSWINCP01865



Spotted gum 3-strip matt brushed RFT4606 MATCHING SCOTIA QSWSCOT01866 MATCHING INCIZO QSWINCP01866



RFT459 MATCHING SCOTIA QSWSCOT01357 MATCHING INCIZO QSWINCP01357



 $2200* \times 260 \times (\pm) 14$ mm (4 lengths per pack = 2.288 m²)









Frozen oak extra matt
MAS3562
MATCHING SCOTIA QSWSCOT03562
MATCHING INCIZO QSWINCP03562



Winter storm oak extra matt
MAS3842
MATCHING SCOTIA QSWSCOT03563
MATCHING INCIZO QSWINCP03563



**Cappuccino blonde oak extra matt**MAS3566
MATCHING SCOTIA QSWSCOT01341
MATCHING INCIZO QSWINCP01341



MAS3843
MATCHING SCOTIA QSWSCOT03564
MATCHING INCIZO QSWINCP03564

<sup>\*</sup> Timber naturally comes in many sizes, depending on availability product length may change. If the standard length is temporarily not available, your retailer will offer you the alternative length instead. Pack sizes will change accordingly.



 $600 \times 310 \times 13 \text{ mm}$  (4 lengths per pack =  $0.744 \text{ m}^2$ )









Granola oak extra matt
INT4097
MATCHING SCOTIA QSWSCOT01341
MATCHING INCIZO QSWINCP01341



Merino grey oak extra matt
INT4115L
MATCHING SCOTIA QSWSCOT03842
MATCHING INCIZO QSWINCP03842



INT4174L

MATCHING SCOTIA QSWSCOT01866

MATCHING INCIZO QSWSCOT01866



INT4114L
MATCHING SCOTIA QSWSCOT03846
MATCHING INCIZO QSWINCP03846



Raisin black oak matt
INT4116L
MATCHING SCOTIA QSWSCOT01348
MATCHING INCIZO QSWINCP01348



 $610 \times 122 \text{ mm (\pm) } 14 \text{mm (12 lengths per pack} = 0.893 \text{m}^2)$ 

Tongue & groove for direct stick installation







Blackbutt
RFH6821
MATCHING SCOTIA QSWSCOT01865
MATCHING INCIZO QSWINCP01865

Spotted gum
RFH6822
MATCHING SCOTIA QSWSCOT01866
MATCHING INCIZO QSWINCP01866






# Tools to help you choose

# FloorExplorer

With so many flooring options to choose from, making the right decision can be a challenge. Let our FloorExplorer guide you through a selection of floors that match your personal needs and style in just a few steps. Give it a try!



SCAN THE QR CODE
TO ACCESS THE
FLOOREXPLORER

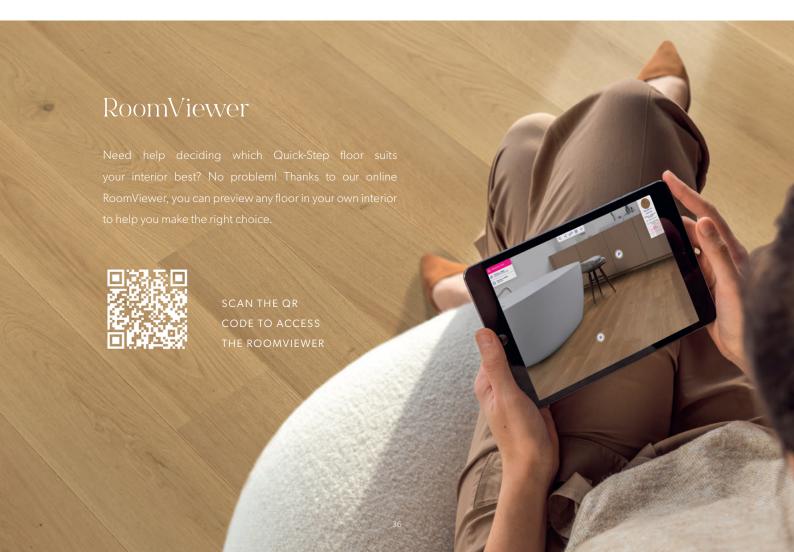



# Sample service

Curious to see what your floor of choice would look and feel like in reality? Do you want to find out if it matches your furniture, wall colour, art ..? Order a floor sample on our website and see for yourself.

Note: Always keep in mind that a sample gives only an indication of the appearance of the floor. Due to the natural characteristics of a timber floor, a sample will never be able to represent all colour variations, knots and natural features of a timber floor.

GET INSPIRED AND FIND A DEALER

quick-step.com.au

# **ACCESSORIES**

# **INSTALLATION**

## **UNDERLAYS**

If you're going for a quick and smooth floating installation, choosing the right underlay is essential. Besides creating a level base, it also provides excellent acoustic insulation and reduces creaking noises.

Quick-Step underlay combines the right balance of noise reduction, compression, slip and damp proof characteristics into one affordable solution.



Quiet-Step Combi-Lay QSC-LAY20/QSC-LAY50

Thickness: 2 mm - Roll: 20/50m<sup>2</sup>

Quiet-Step Combi-Lay is the first choice where a quiet step sound and maximum reduction in multi-storey noise is required. This high density underlay has no match when it comes to reducing foot fall noise, with a reduction of up to 30% over standard underlays.



Combi-Lay Standard C-LAY20/C-LAY50

Thickness: 2 mm - Roll: 20/50m<sup>2</sup>

Combi-Lay Standard is no normal underlay. The dense, closed-cell polyolefin foam provides excellent support, with good reduction of both reflected and impact noise.

### **GLUED-DOWN INSTALLATION**

If you're going for a glued-down installation, use Quick-Step Parquet glue for the best result. Our ready to use glue has a long open time and guarantees fast adhesion. A glued-down installation of your wood floor reduces footstep noise to a minimum, allows your floor to breathe and expand with temperature variations and maximises the performance of sub-floor or floor heating systems. Blackbutt & Spotted gum not recommended over heated sub-floors.



Parquet glue QSWGLUE16A 16 kg

Resealable aluminium bags packed in cardboard boxes. Average usage:  $16~\rm kg$  for  $13-16~\rm m^2$ . Read the instructions before you get started. Check if the glue is compatible with your subfloor.

### **INSTALLATION TOOLS**



Installation set RFIK Set with a tapping block to easily click planks together, a cramp iron for hard-to-reach places and spacers to provide perfect expansion joints (8 to 12 mm) between walls and floor.

## TOOLS FOR WATERPROOFING YOUR WET AREA

Give the perimeter of your Faro, Cascada & Amato floor a waterproof finish using our Foamstrip and Hydrokit to get your wet warranty. Follow the installation instructions and consult the warranty conditions for more details.



Foamstrip NEFOAMSTRIP20 20 strips of 1 m x 10 mm

Fill expansion joints and perimeter gaps with the Foamstrip and combine with the Hydrokit for waterproofing of your wet area. Invisible installation under skirtings, profiles etc.



Hydrokit **QSKITTRANSP** 310 ml

Transparent silicone to combine with the Foamstrip for a waterproof finish of your floor. Invisible installation under skirtings, profiles, etc. Average use: 1 tube for 12m.

# **FINISHING**

## COLOUR-MATCHED SCOTIA

Why choose Quick-Step colour-matched scotia and profiles?

PERFECTLY MATCHING COLOURS

Our scotias and profiles flawlessly match the colour of every floor.

REAL VENEER SURFACE

An authentic timber experience across the entire room.

**QUICK-STEP WARRANTY** 

Quick-Step scotias and profiles come with the same warranty as your floor.



Scotia QSWSCOT(-) 2400 x 17 x 17 mm

A discrete finish that matches the colour of your floor.

### PAINTABLE SKIRTINGS



**QSFLEXSKR** 7000 x 14 x 40 mm

Paintable waterproof flexible skirting Flexible, paintable skirting made of foamed PVC that can be cut to your desired length. Ideal to finish pillars or curved walls. Use the Foamstrip and Hydrokit for a watertight finish in damp rooms. Easy to install with contact glue.

# **COLOUR-MATCHED PROFILES**



Incizo profile QSWINCP(-) 2150 x 54 x 17 mm

Multifunctional and patented finishing tool to finish your floor and stairs in matching colours. Simply cut the Incizo basic profile to the desired shape with the supplied Incizo knife.

Contains 1 Incizo profile, 1 Incizo knife and 1 plastic rail.

APPLICATION 1
Connect two floors of different heights.





APPLICATION 2
Connect two floors of the same height.



















Incizo profile / Incizo aluminium subprofile for stairs
QSWINCP(-) / NEWINCPBASE(-)

The Incizo profile also allows you to finish your stairs and steps in the flooring design of your choice. For this application, you need the Incizo profile and an aluminium subprofile. Subprofile to be ordered separately.

APPLICATION 5 Finish your stairs and steps.





# **MAINTENANCE**

Real timber floors mark and scratch but using Quick-Step accessories will keep your floor looking better for longer.



Cleaning product QSCLEANECO1000

Cleaning product specifically developed for Quick-Step floors. Cleanses the surface thoroughly and safeguards its original appearance to maximise that 'new floor' experience.

Average usage: 1 L for 15 cleaning sessions.



Cleaning kit QSSPRAYKIT

Mop holder with refillable water tank and handy lever to easily moisten and mop your floor. Also includes a washable microfibre mop and 1 L of Quick-Step Cleaning product. A sustainable choice to clean your floor.



Cleaning mop QSSPRAYMOP

Microfibre mop washable up to 60 °C.

Compatible with the Quick-Step Cleaning kit. Do not wash microfibre mop with fabric softener.



Repair kit QSREPAIR

Kit to easily repair light damage and renew the original colour of your floor. Find detailed instructions at quick-step.com.au

## TIPS TO KEEP YOUR FLOOR IN TOP CONDITION:

- · Placing dirt trapping mats at external entrances and felt floor protectors under all furniture is recommended.
- Where possible, use rubberised castors and wheels designed for hard flooring and vinyl chair mats under castor wheels and office chairs.
- Remove small stones and grit with a soft bristle broom or vacuum to help prevent scratching.
- Quick-Step Timber should also be protected from excessive heat and sunlight.
- The use of steam mops (Faro, Cascada & Amato permitted) should also be avoided at all times.
- Stiletto heels are not recommended on Quick-Step Timber floors.
- For regular maintenance, use the Quick-Step Cleaning Kit for best results.

 $(For full\ maintenance\ guidelines\ go\ to\ www.quick-step.com.au)$ 

# We've got the answers to all your questions

# 1. What's the difference between a floating and glued-down installation?

Quick-Step timber floors can be installed in two ways: glued-down or floating (with the exception of Herringbone which cannot be floated). For glued-down installation, we recommend Quick-Step Parquet Glue, which has been specifically developed for use on Quick-Step timber floors. A floating installation requires no glue, but the use of a Quick-Step underlay. In combination with underfloor heating, a glued-down installation works best, whereas a floating installation is easier to achieve. The choice is yours!

# 2. Can I have a timber floor in combination with underfloor heating/cooling?

Yes, you can! Underfloor heating contributes to the warm feeling of a timber floor, but if you live in a warmer climate, a timber floor can also be used with underfloor cooling. If you're installing underfloor heating/cooling, a glued-down floor will give you the best results in terms of heating efficiency. Not compatible with Spotted Gum and Blackbutt flooring.

Check out our special "Floor Heating Installation Instructions" on our website for further detailed guidelines.

### 3. What are expansion joints and why do I need them?

As timber floors expand and contract due to changes in humidity it's important to allow expansion joints at doorways, walls and fixed objects to accommodate expansion.

With a glued-down installation expansion joints are not always necessary. For detailed information, check the installation instructions on our website.

# 4. Why are not all planks the same length?

In line with the variation in size of raw materials it is common for the specified plank length to be made up from shorter planks. This improves sustainability by allowing us to make full use of the tree. These can be used at the start or end of a row, leaving the full plank lengths for the centre.

# 5. Why do some floors have more character than others?

Timber is a natural product which contains unique features such as knots, gum veins, fine cracks and colour variation. The 'liveliness' of these features will vary according to the character within the source tree.

For this reason Quick-Step timber is graded to ensure consistency within each floor - refer to page 15 for information on Quick-Step grading.

# 6. Does a thicker top-layer mean a longer-lasting floor?

Quick-Step floors feature a 2.5mm top-layer to ensure we use as much square meters of beauty from the tree.

An advanced surface coating on every Quick-Step floor provides superior durability. Meaning it is unlikely resanding is required across the life of the floor.

However a Quick-Step floor will accept 2 to 3 resanding and relacquering cycles if ever needed.


# 7. Why can timber flooring change colour?

Timber flooring is not colour-fast, therefore the colour will change over time with exposure to UV light.

# 8. In which direction should I install my floor?

## **GUIDED BY THE LIGHT**

The direction in which you lay your floor will have a huge impact on the overall appearance of a room. As a general rule, you should lay your floor in the same direction as the main light source in a room and in line with the most frequently used entrance. If there are several doors and windows, then opt for the direction that's the easiest to install in.

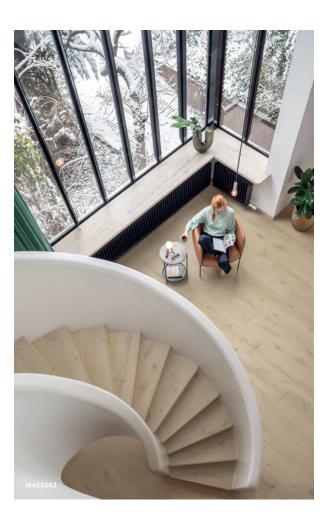

# IN SMALL ROOMS

If you're laying your floor in a small room, you'll want to add a sense of depth. Make a room seem larger by installing your floor lengthwise. Want to increase the effect of the lengthwise installation even further? Then combine a light-coloured floor with darker walls, which will add even more depth to your room.

### IN SHORT ROOMS

In a narrow room, why not lay your floor parallel to the shortest wall? Planks laid widthwise will make a surface appear wider, avoiding a boxed-in feeling. To enhance this further, avoid dark colours for your floor or walls, as these will make the room seem even narrower.







quick-step.com.au

# a brand of **SUNILIN**

Product images may differ from actual product. The availability of products, or the products themselves, may change at any time without notice.

Content © 2024 - 2025 by Unilin BV, division Flooring. All rights reserved. The contents of this brochure may not be reproduced in whole or in part without prior written permission from the publisher.

Coverphoto: CASC6914

# FOLLOW US ON





# STEP BY STEP TOWARDS CIRCULARITY















